

DASH Battery Strap & Holder Plate Assembly Instructions



1. Remove base bracket from packaging and confirm fitment.
2. **Note:** If using Universal fuse holder attach base bracket to mounting point first.
3. If using **Direct fit** battery strap units pre-assemble fuse holders to bracket before fitment.
4. Remove fuse holders from packaging and confirm all holders “clicked together” correctly. If not lay flat upside down and push together until all gaps closed up.



5. Place fuse holder onto base bracket with fuse cover retainers away from where Bus-bar will be mounted. With all fuse covers open, **install all** the M4 screws first and then tighten.
6. Remove nuts from bus-bar side of fuse holder and remove spring washer and one flat washer leaving a flat washer on the stud. Fit bus-bar ensuring main connection eyelet is orientated correctly.
7. Remove nuts, Spring and 1 flat washer from desired fuse positions. Connect terminal lugs as required and fit correct fuse.
8. Fit flat and spring washers, fit nut and tighten. Tighten all other nuts to prevent loss. Fit all covers to prevent shorts. Connect main cable to positive terminal last. **NOTE: Keep the fuses as level as possible by using the washers to space.**

