

DASH TRAILER PLUG LOOM INSTRUCTIONS




This is a plug-and-play option for adding trailer plug wiring to your Y62 Patrol

1. Remove the rear floor and left side lower plastic quarter panel. Locate the factory trailer plug connector and plug in the DASH TRAILER PLUG LOOM. Connect the white wire with eyelet to the nearby 10mm bolt as an earth. (See Fig 1)
2. Run the loom toward the rear of the vehicle and remove the factory rubber grommet in the center of the rear floor section. (See Fig 2)
3. Run the loom through the hole and re-seal with the in-line grommet on the loom.
4. Cable tie and secure the loom as required. Refit the panels as required. From underneath the rear run the loom to the preferred position of your trailer plug.
5. Wire up as required to the trailer plug. Cable tie the loom securely and out of the way of the spare wheel.

NOTE: The black wire in the loom is a reverse trigger wire usually not required for the trailer plug.

The blue wire is for the trailer brake controller, if you are fitting a brake controller use this wire to tap in behind the rear quarter panel.


Fig 1

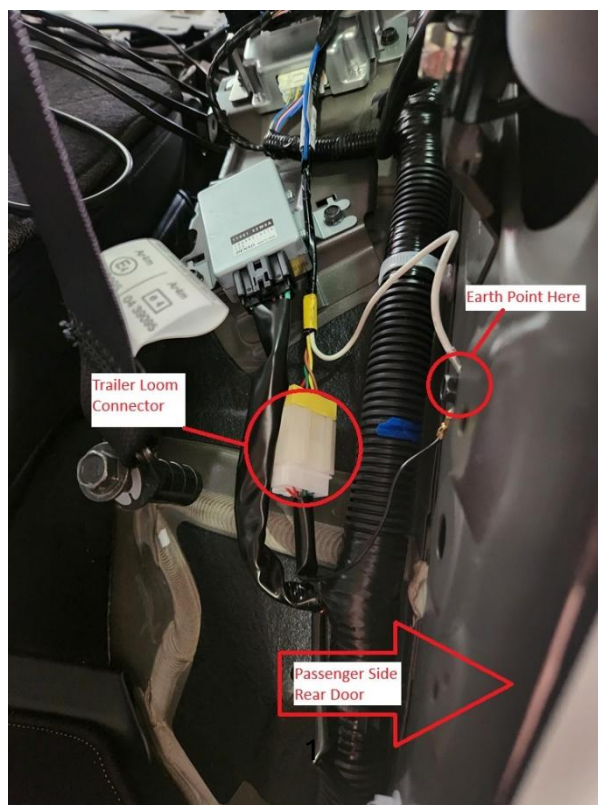

DASH TRAILER PLUG LOOM INSTRUCTIONS



Fig 2

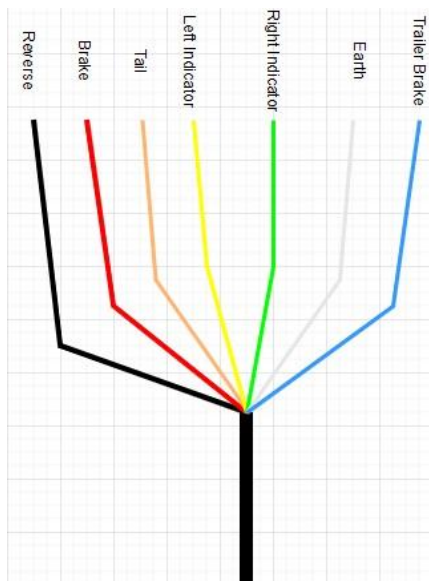

7 Pin Flat Plug & Socket

PIN No. CIRCUIT COLOUR

1	Left-hand turn	Yellow
2	Reversing signal	Black
3	Earth return	White
4	Right-hand turn	Green
5	Service brakes	Blue
6	Stop lamps	Red
7	Rear lamps, clearance & side marker lamps	Brown



7 Pin Plug



7 Pin Socket