

Y62 REAR CAMERA RELOCATION LOOM INSTRUCTIONS



This wiring loom is designed to relocate your factory reverse camera from the tailgate to the rear aftermarket bar.

1. Remove the tailgate inner trims carefully.
2. Unbolt and remove the outer handle to access the camera. (see Fig 1)
3. Remove the camera from the handle trim. Seal the hole in the tailgate with a rubber grommet or duct tape.
4. Reassemble tailgate trim.
5. Remove the roof trim, floor trims, and left quarter panel upper and lower panels. (See Fig.2)
6. Locate the camera connector and disconnect it. Plug in the camera patch loom as required. (See Fig.3)
7. Cable tie loom across the roof and into the left rear quarter. (See Fig.4) Locate the wiring loom grommet in the base of the left rear quarter. (see Fig.5) Pierce a small hole in the grommet and pass the 6-pin connector through the grommet. Be careful not to damage wiring looms. Run the loom across the outside of the rear end to the center of the rear bar. Connect the camera loom and connect the camera.



Fig.1



Fig.2

Y62 REAR CAMERA RELOCATION LOOM INSTRUCTIONS



Fig.3



Fig.4

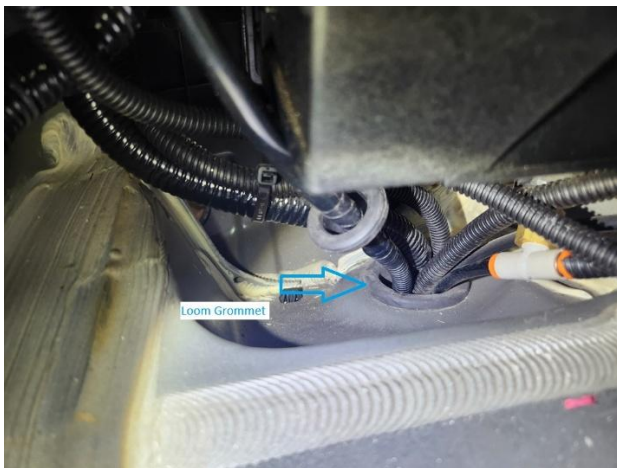


Fig.5