

DM-F FLUSH MAXTRAX MOUNTING KIT

INSTRUCTIONS



Thank you for purchasing our DM-F Flush Mounting Kit


This kit is designed to mount your MAXTRAX MkII or XTREME recovery tracks to your DASH Roof Rack as well as other brands.

All supplied components are made from durable 300-series stainless steel, and the brackets themselves from 5mm aluminium plate to ensure the longevity of the product.

If you have any questions regarding your install that aren't addressed in this manual, please contact us at Sales@dashoffroad.com.au

Kit Contents:

- 1) 2x DM-F Flush Mount Brackets
- 2) 4x M8 Button Head Screws
- 3) 4x M8 Spring Washer
- 4) 4x M8 Flat Washer
- 5) 4x M8 Channel Nuts

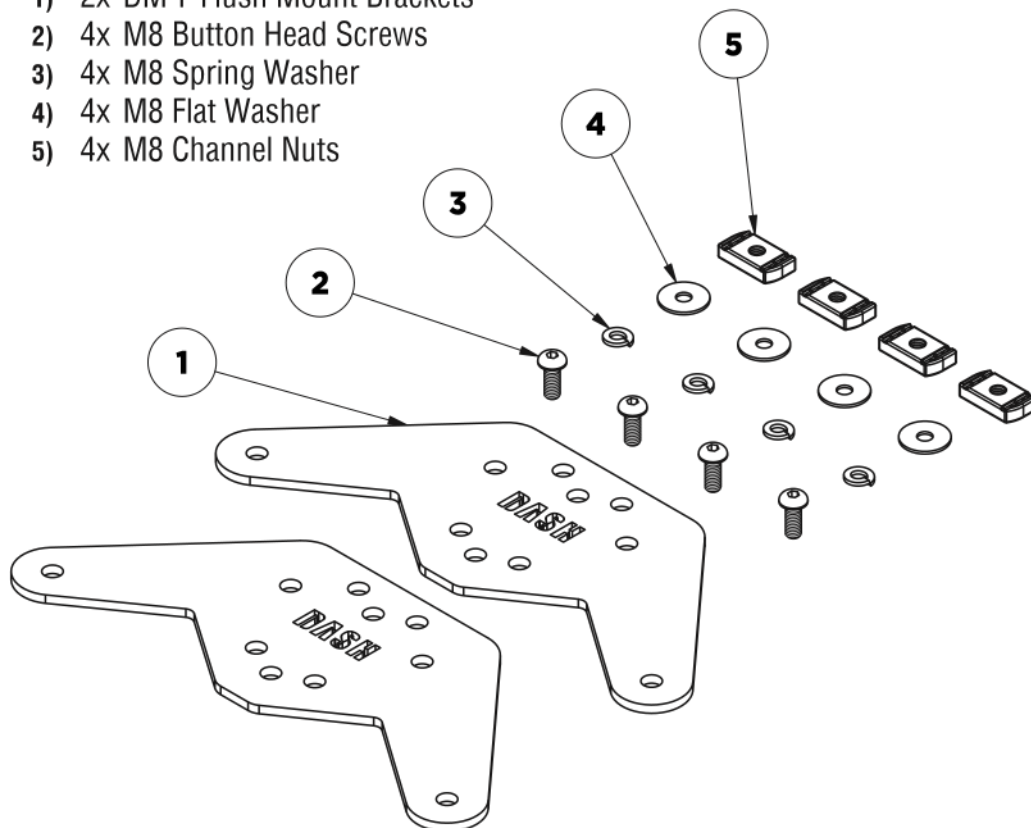

DM-F FLUSH MAXTRAX MOUNTING KIT INSTRUCTIONS



Installation Instructions:

Note: Items in Red are from MAXTRAX MkII or XTREME Pin Kit (Not Included)

- 1) Fix **MAXTRAX Mounting Pins**, **M10 Flat Washers**, and **M10 Nyloc Nuts** to both **DM-F Brackets (1)**
 - Ensure the pins are oriented as per **Diagram A**

NOTES: • Follow MAXTRAX instructions on using the Nyloc Nuts, tightening firmly to avoid pins turning

- Some installations may require excess Pin thread to be trimmed - if necessary do so now

- 2) Locate **Channel Nuts (5)** on your platform in the desired orientation, as per **Diagram A**

A - Longitudinal

B - Lateral

C/D - Offset Longitudinal - *Use these to mount brackets off-centre to free up space on adjacent planks*

- 3) Place assembled brackets on your platform 890mm apart, securing with **M8 Screws (2)**, **Spring Washers (3)**, and **Flat Washers (4)**. Use your MAXTRAX to check pin positions before fully tightening

NOTES: • All four fasteners (two per bracket) and accompanying washers **must** be used and firmly tightened when installing

- 4) Mount either 2 or 4 of your MAXTRAX MkII or XTREME recovery tracks to the pins, turning each pin top 90 degrees to secure

Diagram A

