

DT-E EYEBOLT TIE-DOWN KIT INSTRUCTIONS



Thank you for purchasing our DT-E Tie-Down Kit

These tie-down brackets are designed to mount to your DASH Roof Rack or other compatible platform roof racks like the Rhino-Rack Pioneer and Yakima LockNLoad.

All supplied components are made from durable 300-series stainless steel to ensure the product's longevity.


If you have any questions regarding your installation that aren't addressed in this manual, please get in touch with us at Sales@dashoffroad.com.au

Warning:

This kit is intended for load restraint **only**
Do not use for lifting, recovery, or any other purpose
Be aware of both your vehicle & roof rack load ratings—on and off road—before use


Kit Contents:

- 1) 4x Eye Bolts
- 2) 4x Spring Washers
- 3) 4x Flat Washers
- 4) 4x Channel Nuts

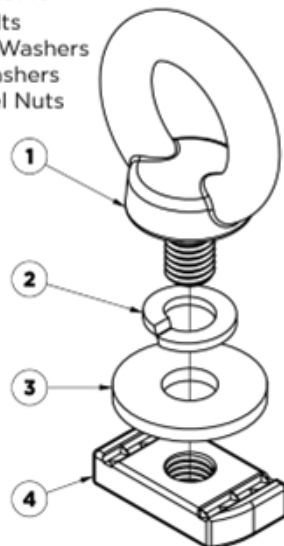

Installation Instructions:

- 1) Slide **Channel Nuts (4)** into your platform

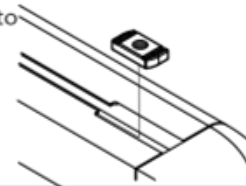


- 2) Place a **Spring Washer (2)** and a **Flat Washer (3)** on each **Eye Bolt (1)** thread

Note: Both washers are required to avoid eye bolt thread fouling on slot base



- 3) Screw assembled **Eye Bolts** into **Channel Nuts**, ensuring they are fully tightened

Note: Check eye bolts regularly as they may loosen over time

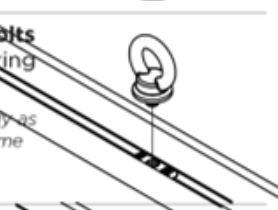

- 4) If necessary, use a screwdriver (*not included*) as shown to further tighten

Note: If eye bolts are powder coated, take care not to damage the finish

